




# PARTS LIST FOR MODEL SV2000

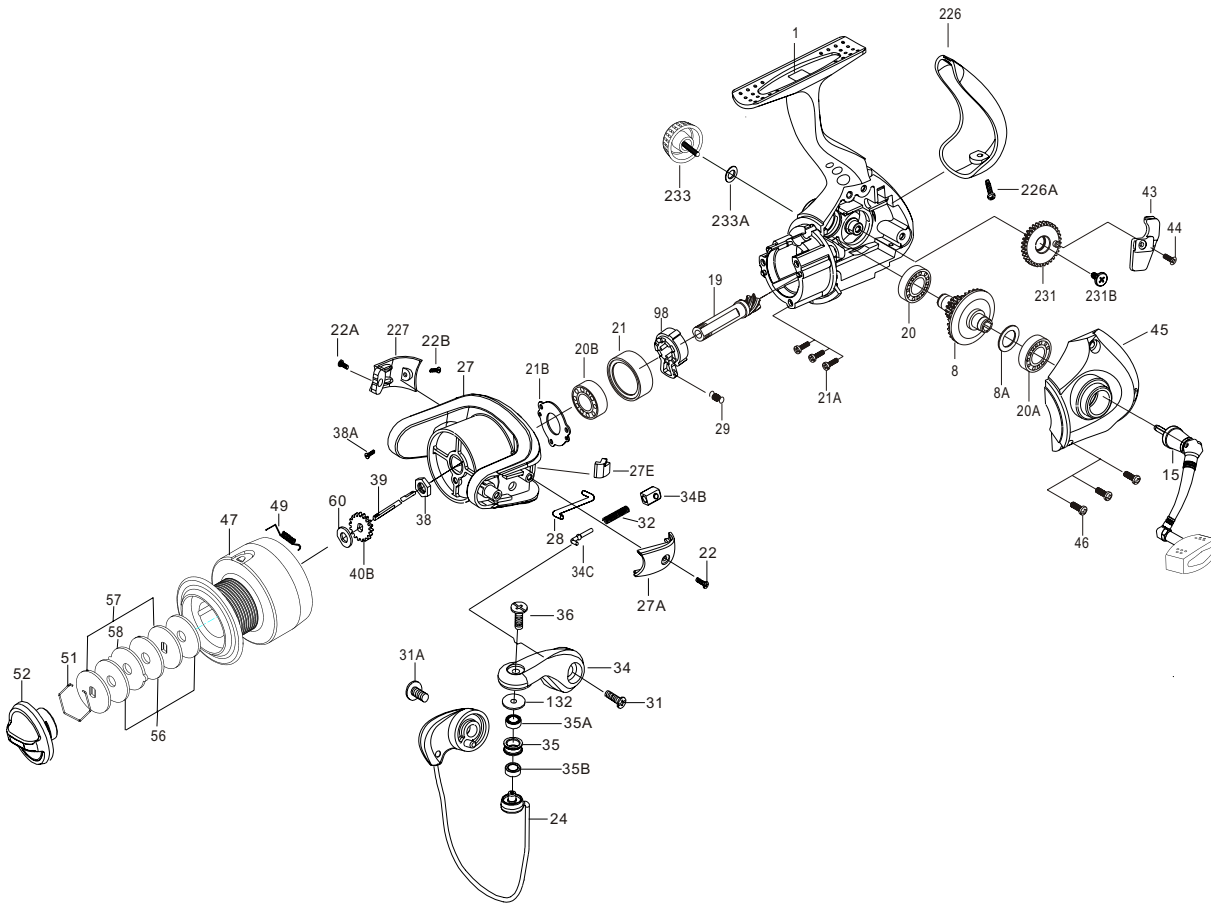

## KEY

NO. DESCRIPTION

1	HOUSING
8	Main Gear Assembly
8A	Main Gear Shim
15	Handle Assembly
19	Pinion Gear
20	Housing Ball Bearing
20A	Housing Cover Ball Bearing
20B	Pinion Ball Bearing
21	Collar
21A	Bearing Mounting Screw(3 req.)
21B	Ball Bearing Fixed Washer
22	Bail Arm Cover Screw
22A	Side Cover Screw
22B	Side Cover Screw
24	Bail Wire
27	Rotor Cup
27A	Bail Pivot Cover
27E	Balance Weight
28	Trip Lever
29	Spring
31	Bail Arm Screw
31A	Bail Wire Screw
32	Bail Spring
34	Bail Arm
34B	Pivot Guide
34C	Pivot Arm
35	Line Roller
35A	Line Roller Ball Bearing
35B	Line Roller Bushing
36	Bail Stud Screw
38	Rotor Nut
38A	Rotor Nut Screw
39	Spool Shaft
40B	Click Ratchet
43	Crosswind Block
44	Crosswind Block Screw
45	Housing Cover
46	Housing Cover Screw(3 req.)
47	Spool Assembly
49	Spool Click Spring
51	Retaining Ring
52	Drag Knob
56	Friction Drag Washer(3req.)
57	Keyed Washer(2 req.)
58	Drag Washer Earred
60	Thrust Washer
98	Clutch Retainer
132	Roller Washer
226	Rear Cap
226A	Rear Cap Screw
227	Cam Cover
231	Crosswind Gear
231B	Crosswind Gear Screw
233	Bearing Cover
233A	Bearing Cover Washer

## PART

NO.

001	2000SV
008	2000SV
008A	500CV
015	2000SV
019	2000SV
020	500CV
020A	500CV
020A500CV	
021	2000SV
021A2000SV	
021B2000SV	
022	2000SV
022A2000SV	
022B2000SV	
024	2000SV
027	2000SV
027A2000SV	
027E2000SV	
028	2000SV
029	2000SV
031	2000SV
031A	2000SV
032	2000SV
034	2000SV
034B2000SV	
034C2000SV	
035	2000SV
035A2000CV	
035B2000SV	
036	2000SV
038	2000CV
038A2000CV	
039	2000SV
040B2000CV	
043	2000SV
044	2000SV
045	2000SV
046	2000SV
047	2000SV
049	2000CV
051	2000CV
052	2000SV
056	2000CV
057	2000CV
058	2000CV
060	2000CV
098	2000SV
132	2000CV
226	2000SV
226A2000SV	
227	2000SV
231	2000SV
231B2000SV	
233	2000SV
233A2000SV	